



LOOSE THE SCREWS

DISMANTLE THE PIECE OFF BRASS

DIM. SEAL RINGS
80 x 100 x 10

Stödlagerhus
Vinkelkontaktlager 7216 B
Låsring övre

DISMANTLE THE TWO RINGS AND THE COVER PLATE.

Låsring undre
Glidskiva
Radialtätning 80-100-10
Rodertrumma

DISMANTLE THE SEAL RINGS WITH SOME TOOLS. IF NECESSARY DRILL A 3-4 MM HOLE AND TAKE IT OUT WITH SCREWS. WHEN YOU REMONT THE NEW RINGS BE CAREFULLY WHEN YOU MOVED IT OVER THE MARKS IN THE SHAFT

Rodermalja

R Hallberg-Rassy
HALLBERG-RASSY VARV AB
HÄLLAVÄGEN 8
S-474 31 ELLOS, SWEDEN